ENGINEERING TOMORROW



Spare parts and accessories

## Thermostat RT

Description		Qty	Code no.
	Cover with pane		017-436166
	Cover	1	
	Screws	4	
	Cover without pane		017-436266
	Cover	1	
	Screws	4	
	Seal screw for cover	1	017425166
DIN 404	Protective cap	1	017-436066
<b>3</b> **	Seal screw for cap	1	017-425166
. AA	Setting knob	1	017-436366
	Capillary tube gland		017-422066
<b>8</b>	Rubber gasket	1	
M14x1 9	Union	1	
G 1/2A	Gland	1	
	Washer	4	

Description		Qty	Code no.
dia. 3/8in. dia.9.5—10mm	Sensor holder kit		017-420166
	Sensor holder (1)	1	
	Clamp (2)	4	
	Sensor clamp		017-420366
	Clamp	1	
@ <u>9</u> 99 0	Screw	1	
	Nut	1	
Clamping band		d	017-420466
00000	Band	1	
	Screw	1	
<b>%</b>	Nut	1	



Description		Qty	Code no.
9	Sensor pocket, G <sup>1</sup> / <sub>2</sub> A (ISO 228/1)		
	Screw-in depth: 112 mm, material: brass		017-437066
	Screw-in depth: 112 mm, material: stainless steel 18/8		017-436966
<u>0</u>	Sensor pocket	1	
	Union	1	
	Washer	1	
	Rubber plug	1	
	Washer	2	

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.